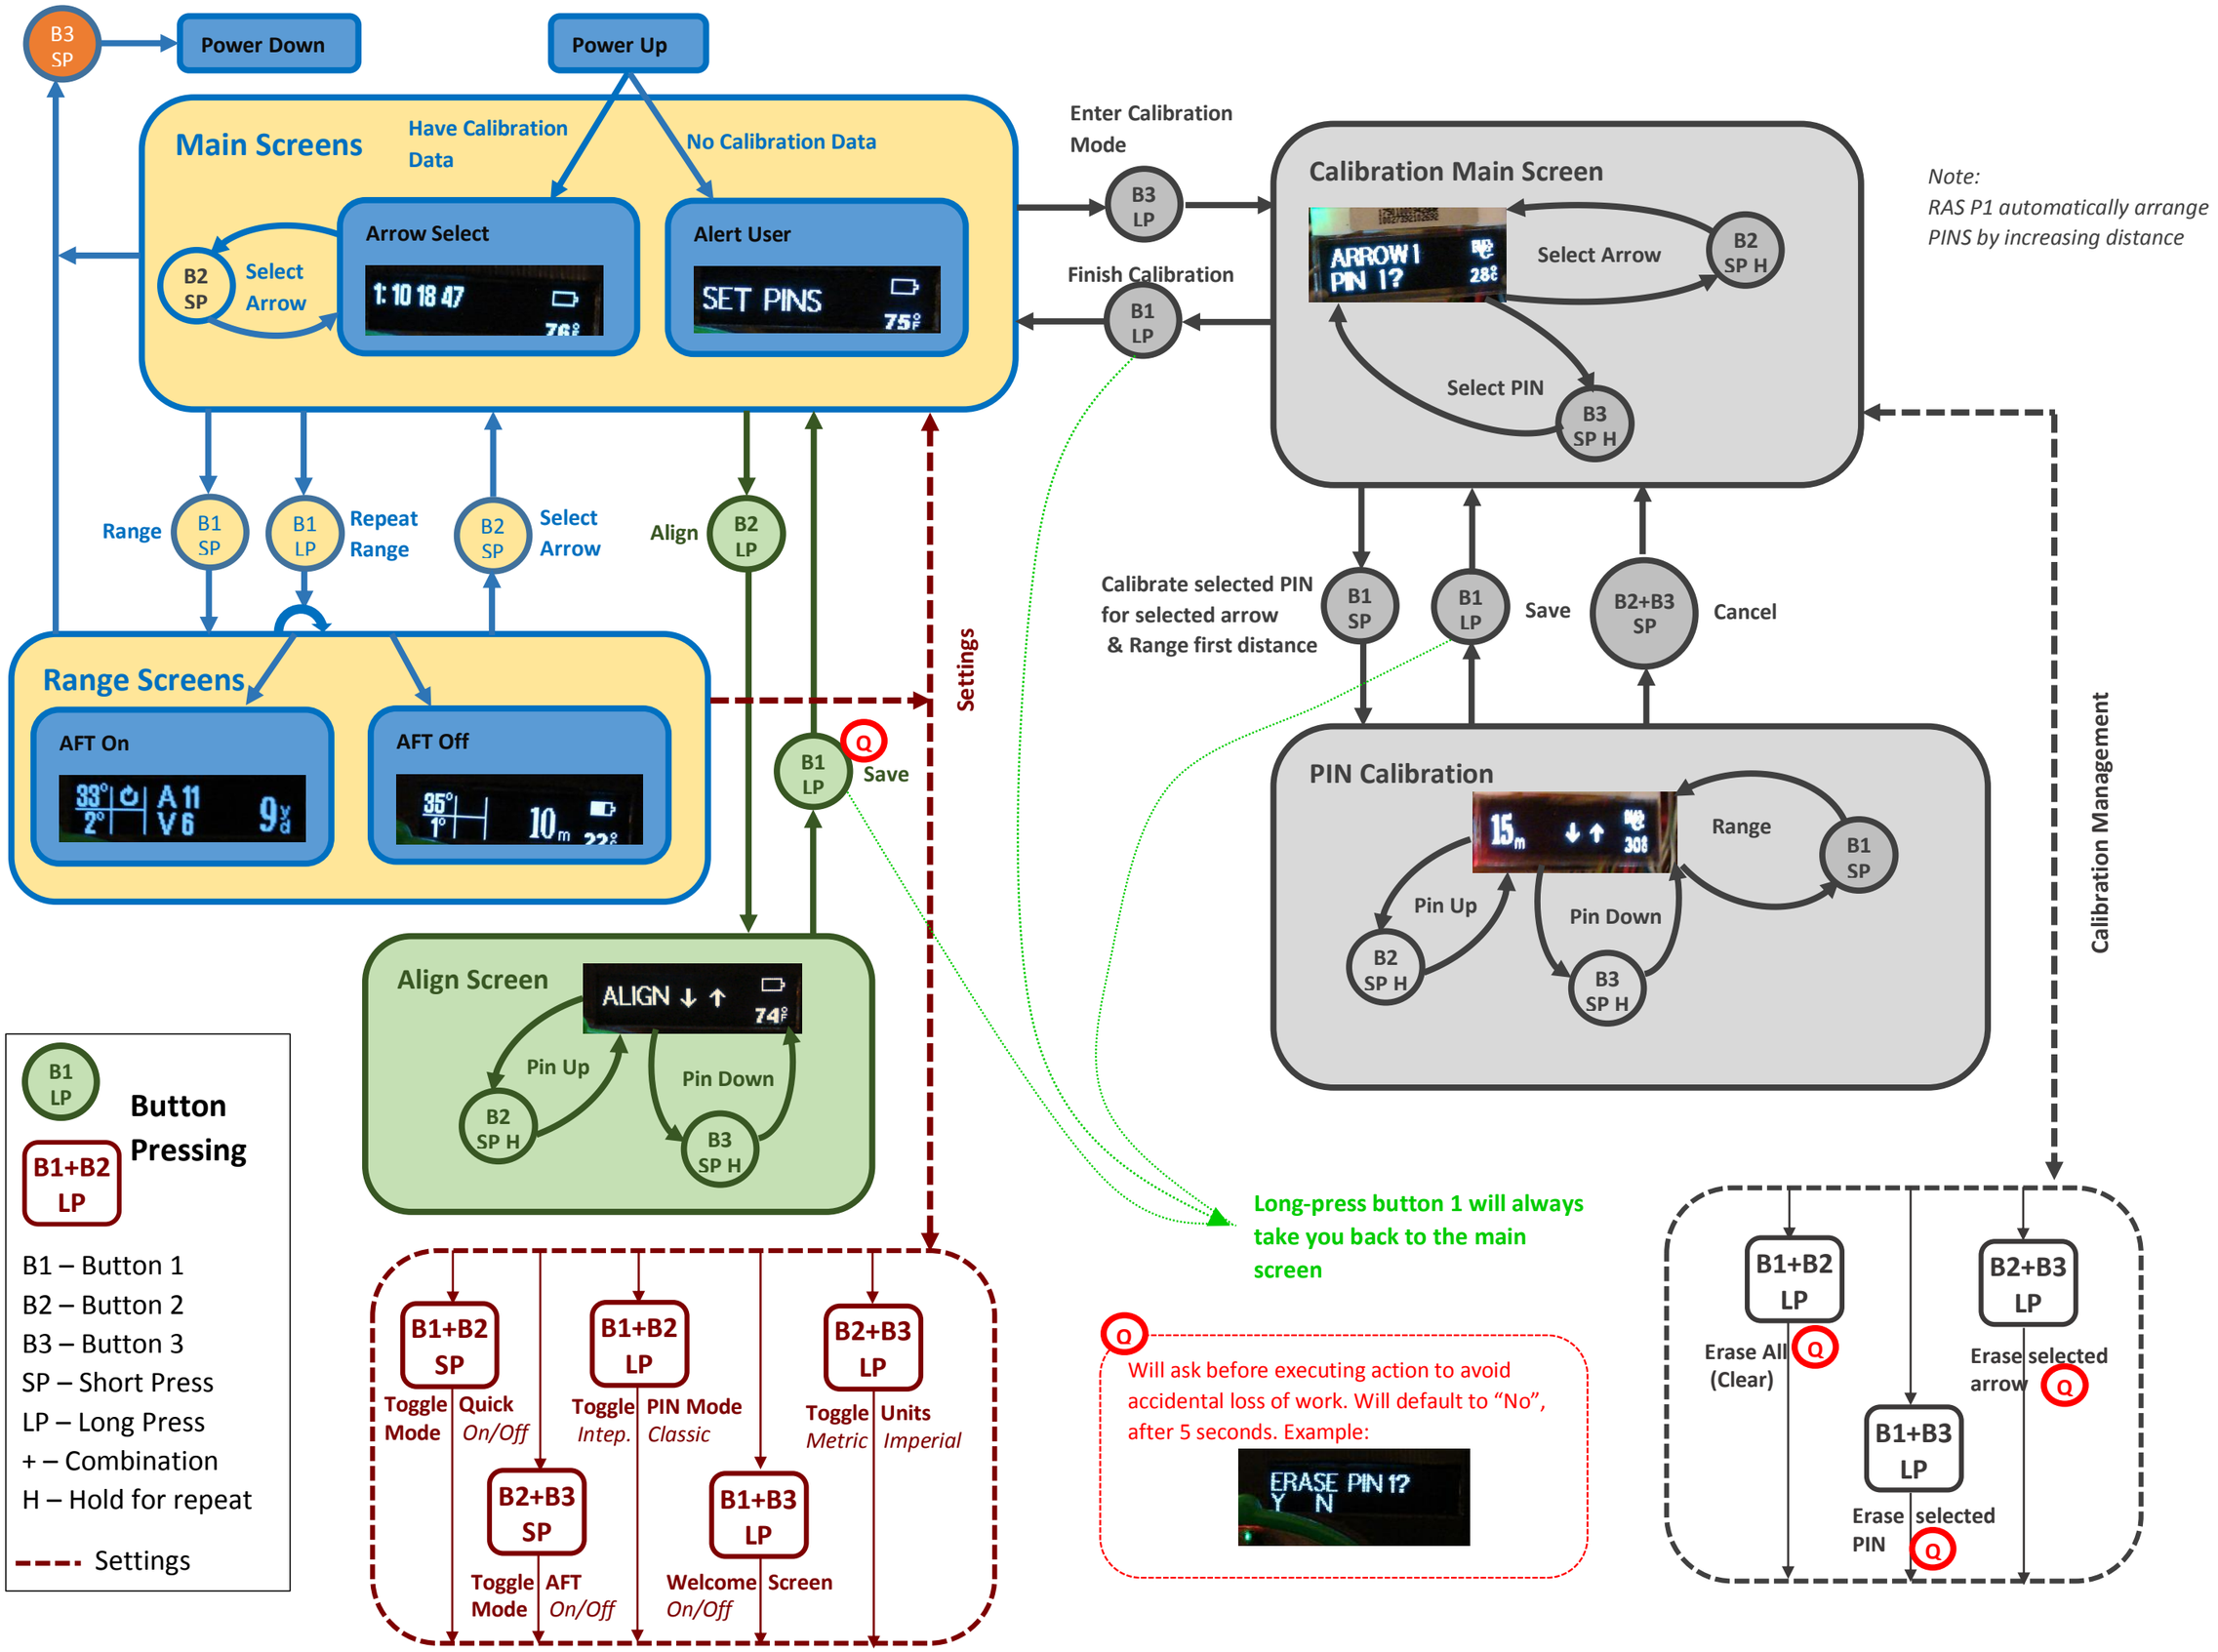
B3 SP
Power Down
Power Up
Main Screens
Have Calibration Data
No Calibration Data
Arrow Select
1: 10 18 47
Alert User
SET PINS
B2 SP
Select Arrow
Enter Calibration Mode
B3 LP
Finish Calibration
B1 LP
Calibration Main Screen
ARROW 1 PIN 1?
Select Arrow
B2 SP H
Select PIN
B3 SP H
Note:
RAS P1 automatically arrange PINS by increasing distance
Range
B1 SP
B1 LP
Repeat Range
B2 SP
Select Arrow
Align
B2 LP
Calibrate selected PIN for selected arrow & Range first distance
B1 SP
B1 LP
Save
B2+B3 SP
Cancel
Range Screens
AFT On
AFT Off
Settings
B1 LP
Q
Save
PIN Calibration
15m
Range
B1 SP
Pin Up
B2 SP H
Pin Down
B3 SP H
Calibration Management
Align Screen
ALIGN
Pin Up
B2 SP H
Pin Down
B3 SP H
B1 LP
Button Pressing
B1+B2 LP
B1 – Button 1
B2 – Button 2
B3 – Button 3
SP – Short Press
LP – Long Press
+ – Combination
H – Hold for repeat
Settings
B1+B2 SP
Toggle Mode
Quick On/Off
B1+B2 LP
Toggle Intep.
PIN Mode Classic
B2+B3 LP
Toggle Metric
Units Imperial
B2+B3 SP
Toggle Mode
AFT On/Off
B1+B3 LP
Welcome Screen On/Off
Long-press button 1 will always take you back to the main screen
Q
Will ask before executing action to avoid accidental loss of work. Will default to "No", after 5 seconds. Example:
ERASE PIN 1?
Y N
B1+B2 LP
Erase All (Clear)
Q
B2+B3 LP
Erase selected arrow
Q
B1+B3 LP
Erase selected PIN
Q